


Junior Cable Replacement Instructions

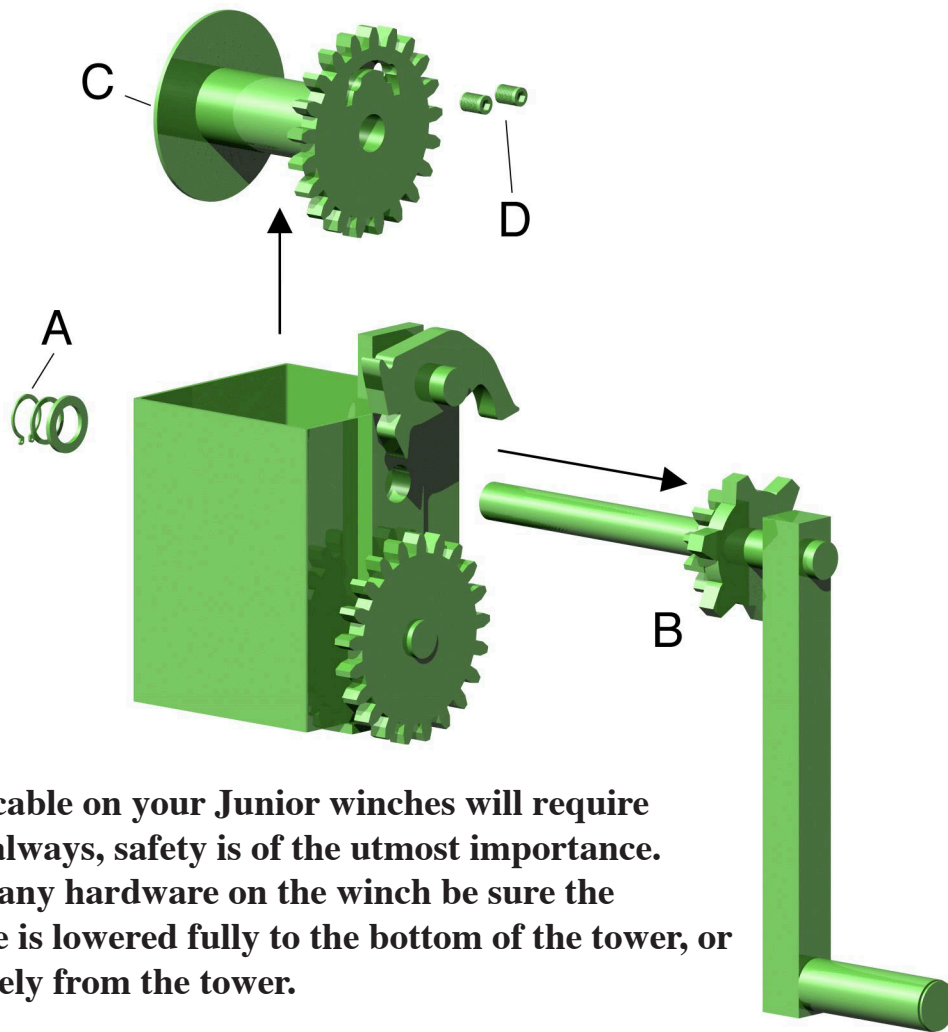

Periodically, the cable on your Junior winches will require replacement. As always, safety is of the utmost importance. Before loosening any hardware on the winch be sure the elevating carriage is lowered fully to the bottom of the tower, or removed completely from the tower.

Step One:

Unwind all cable from the winch.

Step Two:

Remove the retaining ring (A) from the winch shaft with snap-ring pliers.

Step Three:

Reach into the winch housing and grasp the drum (C) that cable normally winds around. While holding this drum in one hand, pull the winch handle (B) out of the winch housing. The drum assembly now will lift out of the housing.

Step Four:

Loosen the two set screws (D) that secure the cable to the drum gear. Notice how the cable threads through this gear. You must re-install the new cable exactly like the old one.

Step Five:

To reassemble the winch, reverse the above steps. You'll have to manually toggle the safety dog to make it mesh with the 6-point gear on the winch handle. Be sure all fasteners are secure. Test the winch in forward and reverse prior to returning it to service.

If you have any questions, call Non-Stop Scaffolding at 800-845-0845.

REMEMBER: SAFETY IS EVERYONE'S RESPONSIBILITY!